

Descrizione del tastierino digitale

0

O

0

0

€

0

GEFRAN

Visualizzazione stato

Visualizzazione LED

Potenziometro

Visualizza lo stato attuale del drive

Dimensioni in mm [inch]

Per l'impostazione della frequenza master

Leggere attentamente questo foglio di istruzione prima dell'installazione e messa in servizio.

http://www.gefran.com (selezionare: Prodotti /Drive & Motion Control/Inverter)

MODE

Indica frequenza, tensione, corrente, unità definite dall'utente, ecc.

KB-ADV50 Foglio di istruzione

Tasto RUN

MODE

0

0

71.9 [2.83]

ΠΠ)

Tasti SU e GIÙ

frequenza master

STOP/RESET

ENTER

guasto o un errore.

25.9 [1.02]

16.3 [0.64]

Avvia il funzionamento del drive CA.

Cambia tra varie modalità di visualizzazione.

Utilizzato per inserire/modificare i par. di programmazione

Imposta il numero di parametro e cambia i dati numerici, come la

Arresta il funzionamento del drive CA e reimposta il drive dopo un

8.6 [0.34]

M3*0.5(2X)

1.5 [0.06]

52.4 [2.06]

olio

61.0 [2.40]

8.1 [0.32]

Tastierino digitale per la serie ADV50

Il contenuto di questo foglio di istruzione e il driver possono essere modificati senza preavviso. Contattare il nostro distributore o scaricare l'istruzione più aggiornata dal sito



• Come utilizzare il tastierino











6

Metodo 1. Installazione diretta (unità: mm[inch])

B Messaggi del display

Messaggi	Descrizione
F 6 0.0	Visualizza la frequenza in ingresso (Master) del drive AC.
X S 0.0	Visualizza l'attuale frequenza in uscita ai morsetti U/T1, V/T2, e W/T3.
88	Unità definite dall'utente (dove U = F x Pr.00.05)
8 5.8	Visualizza la corrente in uscita ai morsetti U/T1, V/T2, and W/T3.
Frd	Visualizza lo stato marcia avanti del motore AC.
r Eu	Visualizza lo stato marcia indietro del motore AC.
c 20	Valore in count (C).
86.88	Visualizza il parametro selezionato
10	Visualizza l'attuale valore memorizzato del parametro selezionato
<i>E F</i>	Guasto esterno.
End	Viene visualizzato "End" per circa 1 secondo quando la modifica è stata confermata premendo il tasto E (Enter). Quando viene impostato un nuovo parametro, il nuovo valore viene automaticamente memorizzato nella memoria. Per modificare un dato, utilizzare I tasti ▲ e ▼.
Err	Visualizza "Err", quando il dato inserito non è valido.



Metodo 2. Fissaggio su piastra spessori A-B (unità: mm[inch]) A. Spessore = 1.2 mm [0.05 inches]

B. Spessore = 2.0 mm [0.08 inches]



Description of the Digital Keypad

Display the driver's current status

For master Frequency setting

Dimensions in mm [inch]

GEFRAN

Status Display

Potentiometer

LED Display

0

0

2

Please thoroughly read this instruction sheet before installation and putting it into use.

MODE

Indicates frequency, voltage, current, user defined units and etc.

http://www.gefran.com (select: Products/Drive & Motion Control/Inverter)

KB-ADV50 Instruction Sheet

RUN Key

MODE

O ENTER

STOP/RESET

Start AC drive operation.

25.9 [1.02]

16.3 [0.64]

1.67]

2.4

Set the parameter number and changes the

numerical data, such as Master Frequency.

Used to enter/modify programming parameters

Stops AC drive operation and reset the drive after fault occurred.

1.5 [0.06]

8.6 [0.34]

M3*0.5(2X)

52.4 [2.06]

61.0 [2.40]

8.1 [0.32]

Change between different display mode.

UP and DOWN Key

Digital Keypad for ADV50 Series

The content of this instruction sheet and the driver file may be revised without prior notice. Please consult our distributors or download the most updated instruction version at



















71.9 [2.83]

 \bigcirc



Method 1. Direct installation (unit: mm[inch])

B Display Messages

Display Message	Descriptions
F 6 0.0	Displays the AC drive Master Frequency.
XS00	Displays the actual output frequency at terminals U/T1, V/T2, and W/T3.
U :80	User defined unit (where U = F x Pr.00.05)
8 5.0	Displays the output current at terminals U/T1, V/T2, and W/T3.
Frd	Displays the AC motor drive forward run status.
r E u	Displays the AC motor drive reverse run status.
c 20	The counter value (C).
06.00	Displays the selected parameter.
10	Displays the actual stored value of the selected parameter.
88	External Fault.
End	Displays "End" for approximately 1 second if input has been accepted by pressing ENTER key. After a parameter value has been set, the new value is automatically stored in memory. To modify an entry, use the ▲ and ▼ keys.
Err	Displays "Err", if the input is invalid.

Installation

Method 2. Mounting by the plate thickness (unit: mm[inch]) A. Thickness = 1.2 mm[0.05 inches]

B. Thickness = 2.0 mm[0.08 inches]



